

# SWITCHLINK®


## MAINTENANCE PROCEDURE:

*After a period of usage the detent of the handle may need to be adjusted. This adjustment can be done following the procedure outlined below.*

### Detent Adjustment procedure:



1. Loosen the 4- Allen screws located on the side of the top adapter (closure) plate at the 4 quadrants with an Allen wrench.

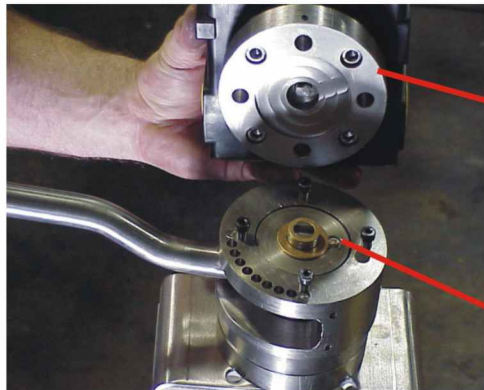

2. Remove the top adapter (closure) plate.



3. Located adjacent to the pocket in the top of the center actuating coupler is a spring compression screw. Adjust the screw clockwise to increase the detent or counter clockwise to lessen the detent. Adjust until the amount of detent exhibited is what is required.



4. Reassemble in reverse order.